

CONTROL EQUIPMENT

DIGITAL STARTER PROTECTOR
3 PHASE, 380V GENERATION 2



DIGITAL STARTER PROTECTOR - 3 PHASE, 380V GENERATION 2

Responsibility

The manufacturer is not liable for malfunctioning if the product has not correctly been installed, damaged, modified, and /or run outside the recommended work range or in contrast with other indications given in this manual.

The manufacturer declines all responsibility for possible errors in this operation manual, if due to misprints or errors in copying. The manufacturer reserves the right to make any modifications to products that it may consider necessary or useful, without affecting the essential characteristics.

Introduction

Model L931 is useful in all cases where it is needed to control and protect a single pump and managing its turn-on and turn off by different electrical installations.

Typical usage scenarios include:

- Houses
- Flats
- Holidays houses
- Farms
- Water supply from wells
- Irrigations of greenhouses, gardens, agriculture
- Rain water reuse
- Industrial plants
- Waste water tank / Sewage sink

Technical parameter & features


Main features:

- Built In function switch
 - applied for water supply by liquid level control through float switch or liquid probe;
 - applied for water supply by pressure control through pressure switch and pressure tank;
 - applied for drainage by liquid level control through float switch or liquid probe.
- Automatic stops the pump in the case of water shortage, protecting it from dry running without installing float switch or liquid probe in the well.
- Auto / Manual switch.
- Dynamic LCD displaying pump running state.
- Push Button Calibration.
- Pump Accumulative Running Time Displaying.
- Pump Last Five Fault Record Displaying.
- RS485 Communication.
- Starts and stops the pump in accordance with the different liquid level or pressure setting.

Model L931 has many operation modes by adopting different electric installations. An important feature that makes the difference between Model L931 and common On/Off pump control box is the probe / sensor free in the well. Our special design makes it a very reliable and sensitive protection against pump dry running without installation of a probe / sensor in the well.

MAIN TECHNICAL CHARACTERISTIC	
Control characteristic	Double liquid level control
	Pressure control
Control method	Manual / Auto
Liquid level control characteristic	Pulse electrode probe & float switch
Pressure control characteristic	Pressure switch (n/c) & pressure tank
MAIN TECHNICAL DATA	
Rated output power	0.75-4kW (1HP-5.5HP) 5.5-11kW (7.5HP-15HP) 15kW (20HP)
Rated input voltage	Refer to the nameplate
Trip response time of over load	5sec-5min
Trip response time of open phase	< 2 sec
Trip response time of short circuit	< 0.1sec
Trip response time of under / over voltage	< 5sec
Trip response time of dry run	6sec
Recovery time of over load	30min
Recovery time of under / over voltage	5min
Recovery time of dry run	30min
Trip voltage of over voltage	115% of the rated input voltage
Trip voltage of under voltage	80% of the rated input voltage
Liquid level transfer distance	≤1000m
Protection function	Dry run Over load Transient surge Under voltage Over voltage Open phase Pump stalled Short circuit Over temp Three phase unbalance Phase reversal Repeated start
MAIN INSTALLATION DATA	
Working temperature	-25°C -- +55°C
Working humidity	20% - 90%RH, no drips concreted
Degree of protection	IP54
Install position	Vertical
Unit dimensions (L x W x H)	30.2 x 24 x 12 cm
Unit weight (net)	2.3kg
RS485 TECHNICAL DATA	
Physics Interface	RS485 Bus Interface: asynchronism semiduplex
Baud rate	1200 bps, 2400 bps, 4800 bps, 9600bps Default: 9600bps
Protocol type	MODBUS Protocol (RTU)

1.3 Controller components

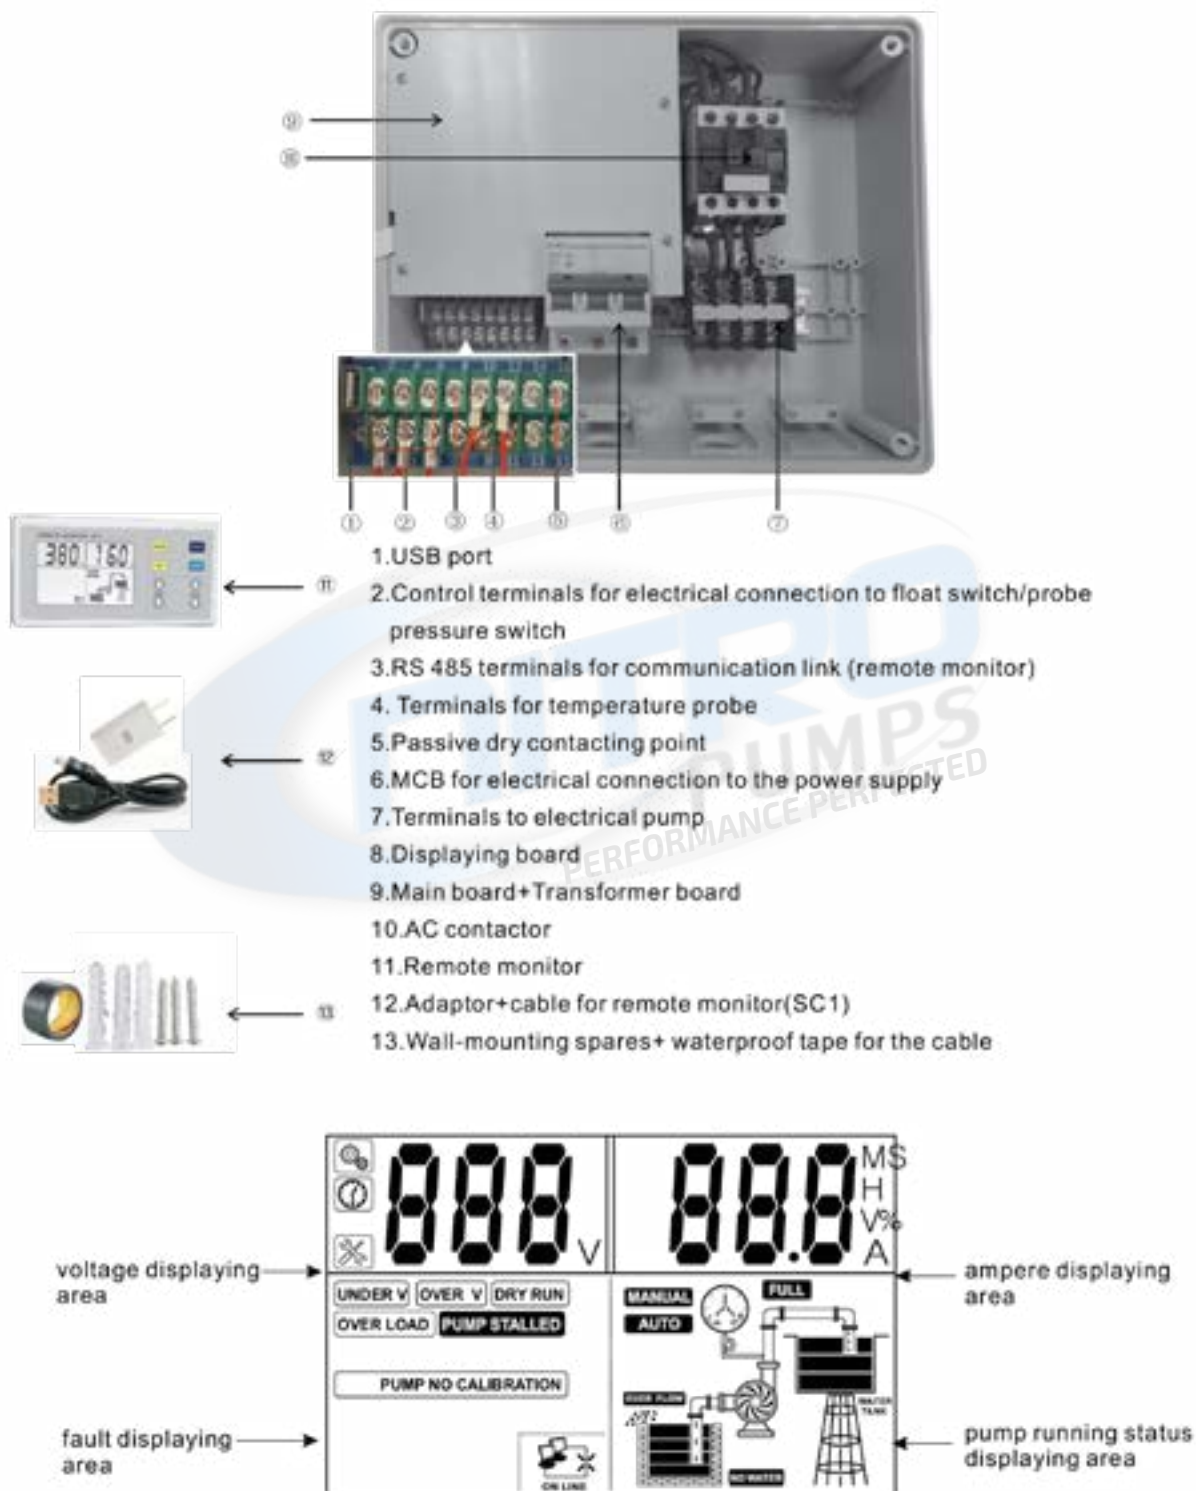

Icon descriptions


Meaning of the icons shown on the LCD

Icon	Meaning/Description
	pump parameter configuration icon, when this icon appears, pump control box is in parameter adjusting manual;
	time displaying icon, when this icon appears, it means pump control box is displaying some parameter of time, eg: pump accumulative running time (unit: hour); counting down etc
	pump fault icon, when this icon appears, it means pump control box is displaying some fault information;
	network connection error icon, when this icon appears, it means there is no network connections or network connection error between pump control box and SC(slave controller) or computer;
	network normal connection icon, when this icon appears, it means the network connection between pump control box and SC (slave controller) or computer is normal;
V	voltage
M	minute
S	second
H	hour
%	percent
A	ampere
	pump running
	pump stops running
	low pressure or lack of pressure in the pipeline or pressure tank
	high pressure or full of pressure in the pipeline or pressure tank

Electrical connection to the power supply line and electrical pump

2 INSTALLATION

2.1 Electrical connection to the power supply line and electrical pump

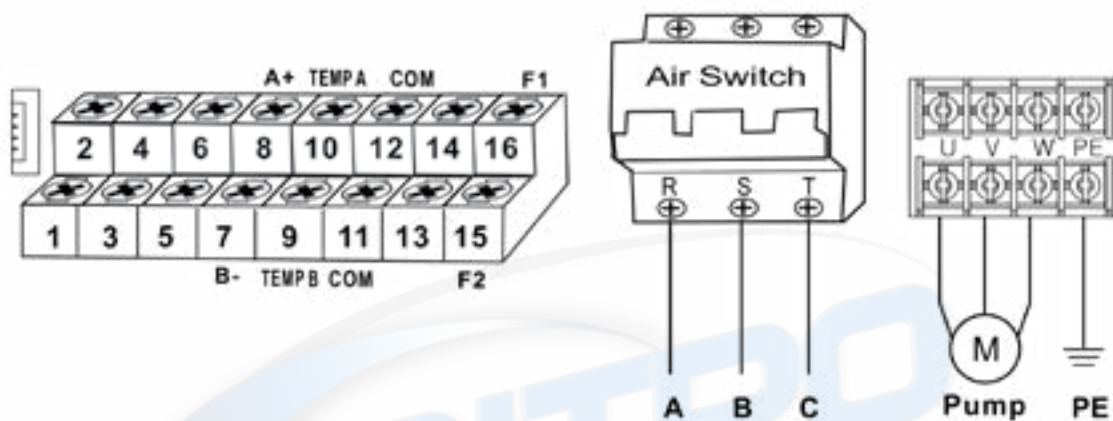

DANGER - Electric shock risk



Before carrying out any installation or maintenance operation, the M531 should be disconnected from the power supply and one should wait at least 2 minutes before opening the appliance.



Never connect AC power to output UV W terminals.



Don't put wire, metal bar filaments etc into the controller.




Ensure the motor, controller and power specifications matching.




The electrical and hydraulic connections must be carried out by competent, skilled, qualified personnel.

Function switch setting

Pump users can set the function switch to meet different application requirement, before setting the function switch, the L931 should be disconnected from the power supply, after complete the setting, apply power to L931 and observe the application sign displayed on the LCD conforming to the following list.

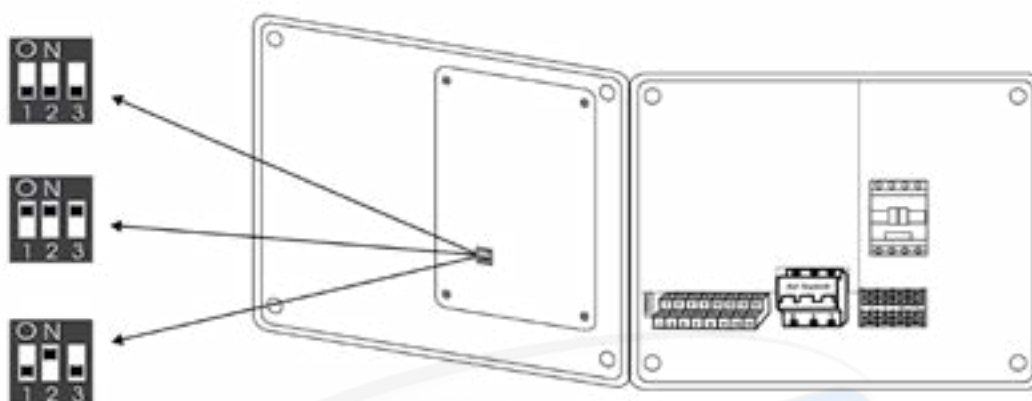

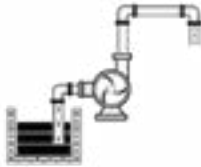Item	Switch position	Messages & Graphic	Application
1			Applied for water supply or drainage by liquid level control through float switch or liquid sensor
2			Applied for water supply by pressure control through pressure switch & pressure tank
3			Applied for drainage by liquid level control through float switch & liquid probe

Parameter Calibration setting & erasing

To achieve best level of protection of the pump, it is essential that parameter calibration must be done immediately after successful pump installation or pump maintenance.

Setting the parameter calibration

- Press the **MODE** key to switch to manual state, make sure the pump not running and LCD screen displaying:




- Press the **START** key to run pump, confirm the pump and all pipe network in normal working state (including voltage, running ampere et); LCD screen displaying:



- Press the **STORE** key; The L931 makes a "Di" sound and starts countdown, LCD screen displaying:



- Pump stops running and parameter calibration completed, LCD screen displaying:
L931 is ready for running.

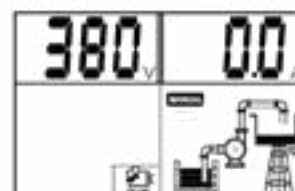


Erasing former parameter calibration

When pump is reinstalled after maintenance or new pump is installed, user must erase the former parameter calibration and a new calibration must be done.

Erasing the parameter calibration

- Press the **MODE** key to switch to manual state, make sure the pump not running and LCD screen displaying:

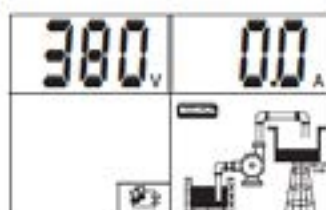


- Press the **STOP** key and release till L931 makes a "Di" sound, L931 recover the default factory setting and LCD screen displaying:




Installing liquid probe & float switch

Liquid probe installation

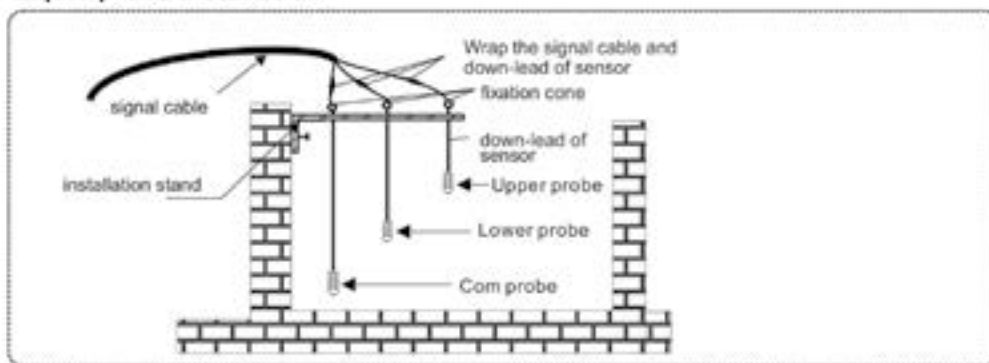


- ⚠ In event of high risk of electric storms (lightning) or when liquid medium in well or tank or sump is very dirty it is recommended float switch is used.

Float switch installation

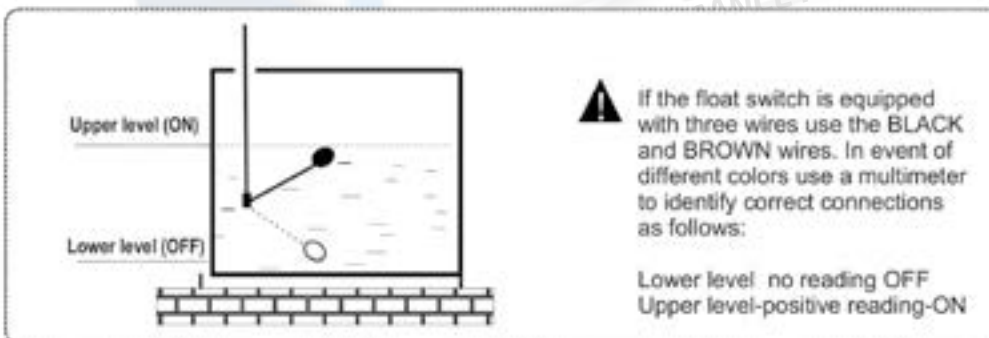

- ⚠ DO NOT ENCASE SENSOR LEADS, FLOAT SWITCH WIRE OR SIGNAL CABLES IN METAL PIPES. USE PVC OR PE TUBING.

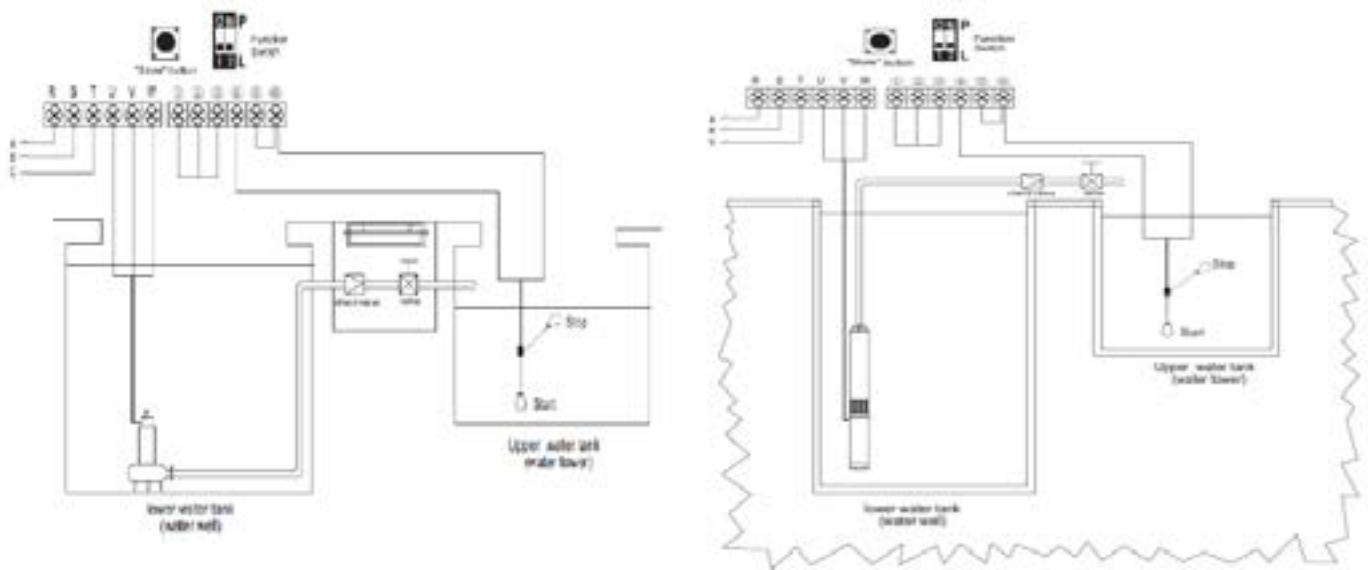

1). Starting condition

liquid level in the water tank is below Lower probe (float switch: Down level) and liquid level in the water well is above Lower probe (float switch: Up level), the L931 will run pump;




2). Stop condition

liquid level in the water tank reaches Upper probe (float switch: Up level) or liquid level in the water-well is below Lower probe (float switch: Down level); the L931 will stop pump running;







3). The probe / sensor free in the water well

as the L931 has reliable and automatic stop function against pump dry-run (dewatering), if it is used in submersible pump for deep well, pipeline pump or other situations when it is inconvenient to install lower liquid probe in the well, pump users can put terminals 1, 2, 3 in short circuit, which minimize the troubles and costs.

4). Meaning of the messages & graphic shown on the LCD screen

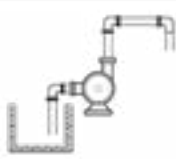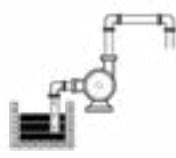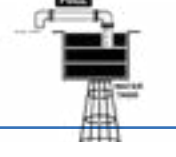Messages & Graphic	Description
	Lack of water in water well
	Full of water in water well
	Lack of water in water tank
	Full of water in water tank

3.2.2 Water supply by pressure control through pressure switch & pressure tank

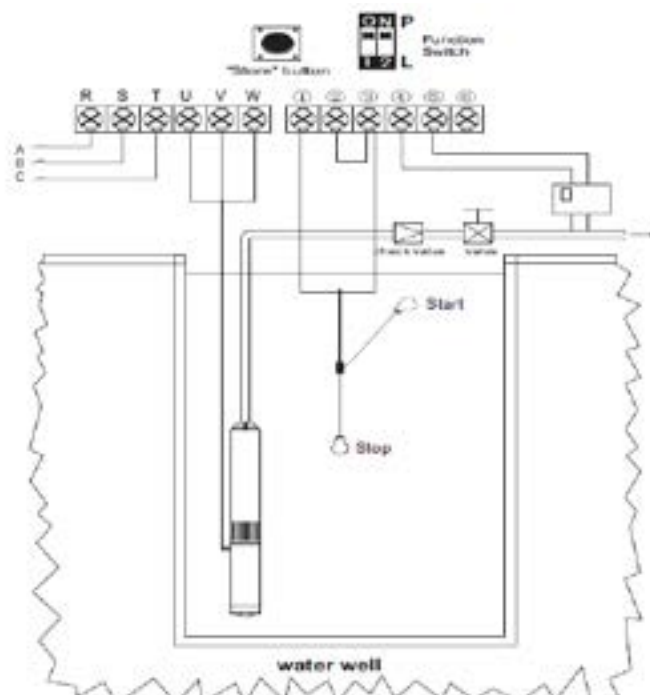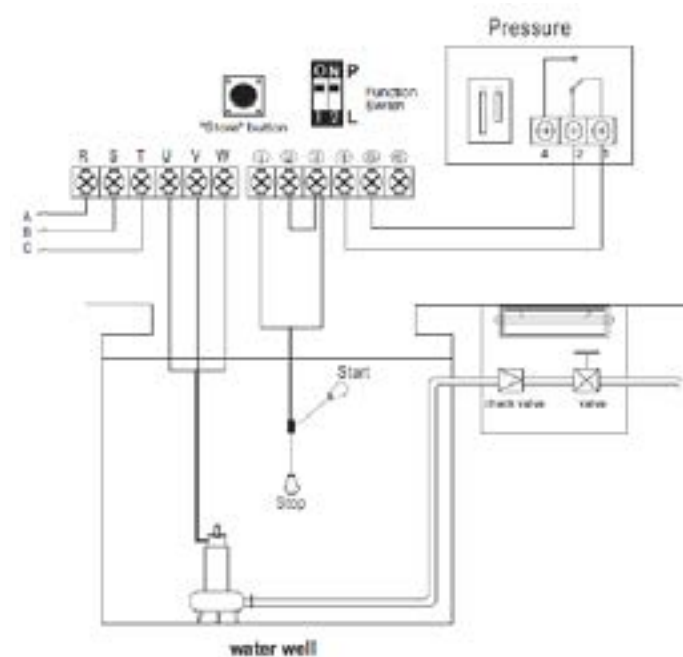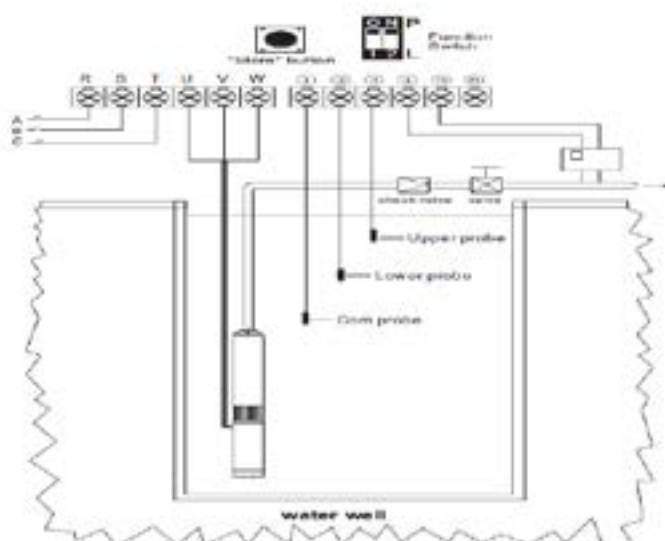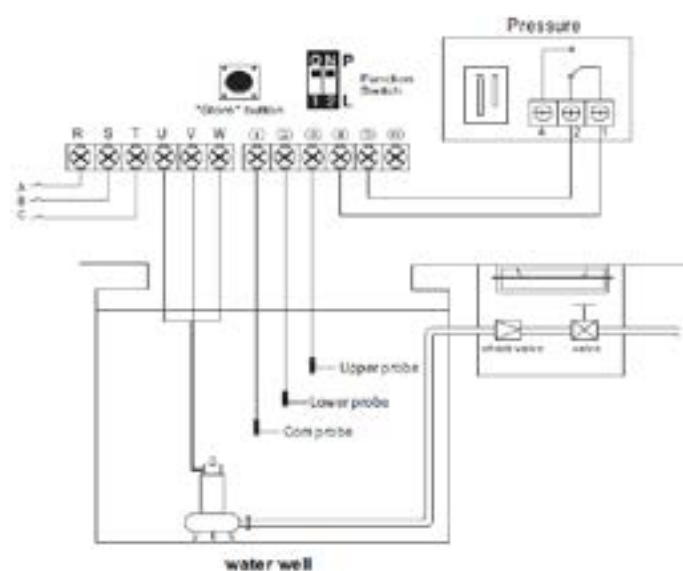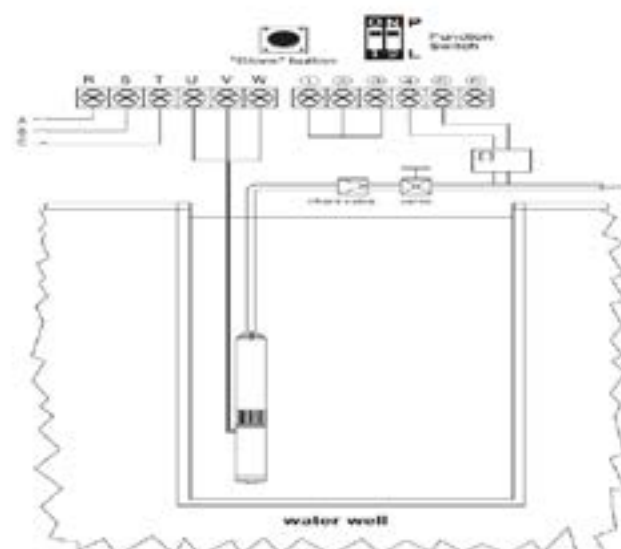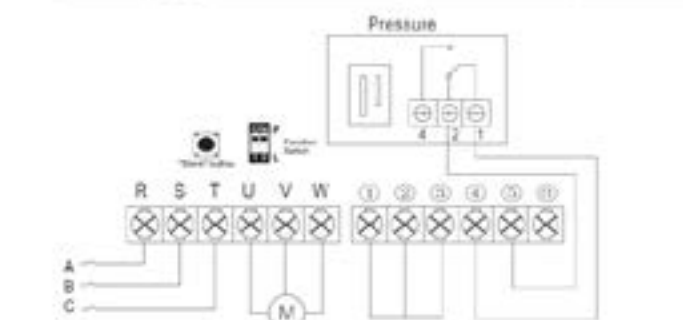

1). Starting condition

there is no pressure in the pipeline or pressure tank, contacting point of pressure switch is ON and liquid level in the water well is above Lower probe (float switch: Up level), the L931 will run pump;

2). Stop condition

there is full pressure in the pipeline or pressure tank, contacting point of pressure switch is OFF, the L931 will stop pump running; Note: pressure switch with N/C (normal close) contacting point: no pressure, contacting point is ON; meet the pressure setting, contacting point is OFF


3). The probe / sensor free in the water well

as the L931 has reliable and automatic stop function against pump dry-run (dewatering), if it is used in submersible pump for deep well, pipeline pump or other situations when it is inconvenient to install lower liquid probe in the well, pump users can put terminals 1, 2, 3 in short circuit, which minimize the troubles and costs.

4). Meaning of the messages & graphic shown on the LCD screen

Messages & Graphic	Description
	Lack of water in water well
	Full of water in water well
	Full of pressure in pipeline or pressure tank
	Lack of pressure in pipeline or pressure tank

3.2.3 Drainage by liquid level control through float switch & liquid probe

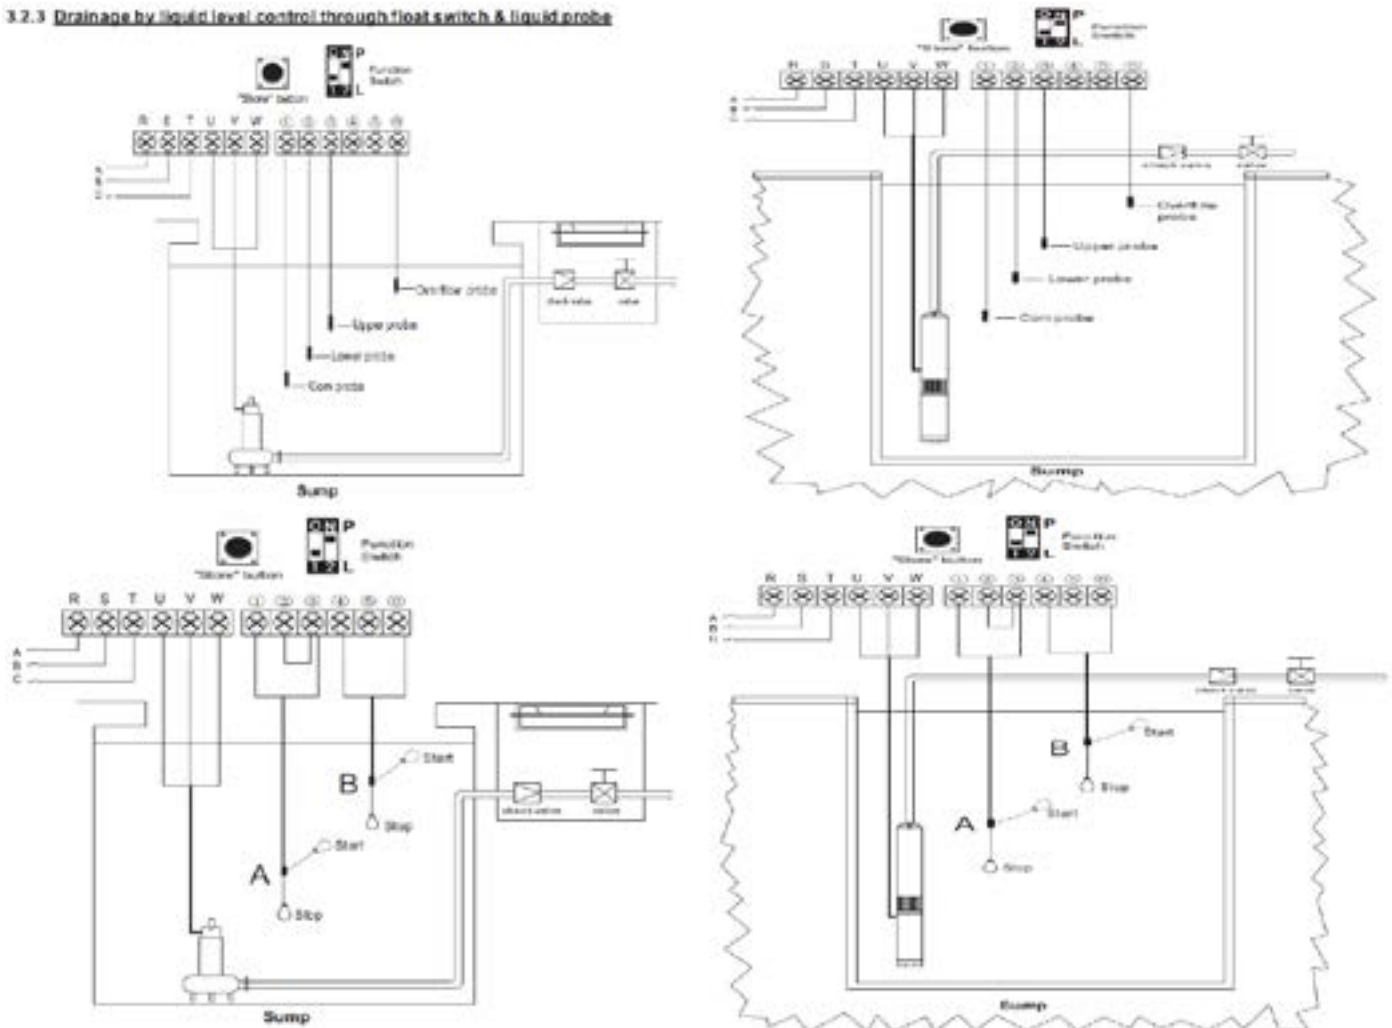

- 1). **Starting condition**
liquid level in the sump reaches Upper probe (float switch A: Up level), the L931 will run pump;
- 2). **Stop condition**
liquid level in the sump is below Lower probe (float switch A: Down level), the L931 will stop pump running;
- 3). **Over Flow alarm**
when pump is draining water, liquid level in the sump is still rising to Overflow probe (float switch B: Up level), the L931 will sound the overflow alarm to warn pump user to take further action.
- 4). **Meaning of the messages & graphic shown on the LCD screen**

Messages & Graphic	Description
	Lack of water in sump
	Overflow in sump

4.1) Switching to MANUAL mode

Press the **MODE** key to switch to manual state, L931 is under the manual control state; under manual state, press the **START** key to run pump; press the **STOP** key to stop pump running;

Note: under manual state, the L931 can not receive the signal from liquid level probe or pressure switch.

4.2) Switching to AUTO mode

Press the **MODE** key to switch to auto state, L931 is under the auto control state; under auto state, L931 will run or stop the pump according to the signal from liquid level probe or pressure switch.

Note: under auto state, if the pump is running and pump user wants to stop pump running compulsory, press the **MODE** key to switch to manual state and pump stops running;

Note: under auto state, if the input power being cut off and recovery power again, the L931 will enter operation state after 10seconds countdown;

Note: no matter the L931 is under auto or manual state, if the input power being cut off and recovery power again, the L931 will resume its operation state as the operation state before power being cut off;


4.3 Pump protection

During pump running, if dry run, over load, under voltage, over voltage etc failures happened, the L931 will immediately shut down the pump running and automatically execute a check for restarting conditions after a built in time delay has elapsed. The L931 will not recover automatically until all the abnormal situation(s) have been cleared. If pump stalled, open phase etc serious failures happened, pump user must check the pump and motor immediately and repair the pump.

4.4 Pump last five failure record displaying

The L931 can memorize the last five failures of pump, so it is very convenient for the pump users to analyst the pump running conditions. Displaying the pump last five failure record

- Press the **MODE** key to switch to manual state, make sure the pump not running and LCD screen displaying:

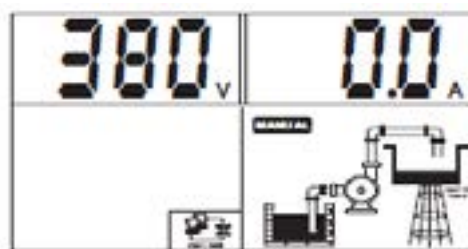

- Hold pressing **STOP** key and press **MODE** key, the panel makes a “Di” sound, the panel displays pump failure record.

- Press **STOP** key to quit the failure record displaying;




4.5 Pump accumulative running time displaying


The panel1 can memorize how many hours of pump running, so it is very convenient for the pump users to analyse the pump running conditions and do maintenance

Displaying the pump accumulative running time

- Press the **MODE** key to switch to manual state, make sure the pump not running and LCD screen displaying:

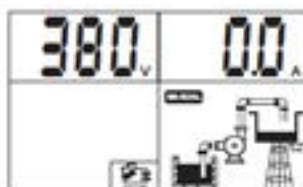

- Hold pressing  button and press **STOP** key, the panel makes a “D” sound, the panel displays pump failure record.

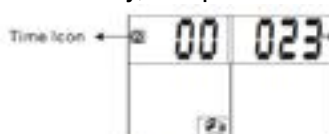

THE PUMP HAS RUN FOR 23 HOURS

- Press **STOP** key to quit the accumulative running time displaying.

Fault Message	Possible Cause	Solutions
flashing of UNDER V	the real running voltage is lower than the calibrated voltage, pump is in under voltage protection state	report low line voltage to the power supply company L931 will attempt to restart the pump every 5minutes until line voltage is restored to normal
flashing of OVER V	the real running voltage is higher than the calibrated voltage, pump is in over voltage protection state	report high line voltage to the power supply company L931 will attempt to restart the pump every 5minutes until line voltage is restored to normal
flashing of OVER LOAD	the real running ampere is higher than the calibrated running ampere, pump is in over load protection state	L931 will attempt to restart the pump every 30minutes until running ampere is restored to normal
	pump impeller is jammed / pump motor dragging / pump bearing broken	check pump impeller or bearing
flashing of OPEN PHASE	power supply lose phase	report to the power supply company
	controller inlet wire or pump cable broken	repair inlet wire or pump cable
flashing of PUMP NO CALIBRATION	parameter calibration not completed	refer to parameter calibration setting
flashing of DRY RUN	liquid level in the well / sump is below the pump intake, pump stops running	L931 will attempt to restart the pump every 30minutes until liquid level above the pump intake